


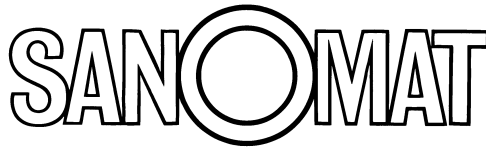

Operating Instructions



Additional function

~ Euro-Cream-Wave ~

Vaihinger GmbH
Horstweg 29
65520 Bad Camberg-Erbach
Telefon (06434) 9405-0
Telefax (06434) 9405-99
www.sanomat.com
info@vaihinger.com



Introduction

This document is the addition to our general origin SANOMAT-operating-instruction.

The Euro-Cream-Wave is equipped with 2 topping-containers.

If you need further information, please contact our service team via email:
info@vaihinger.com

Yours Vaihinger-Team



1. Drawing Euro-Cream-Wave

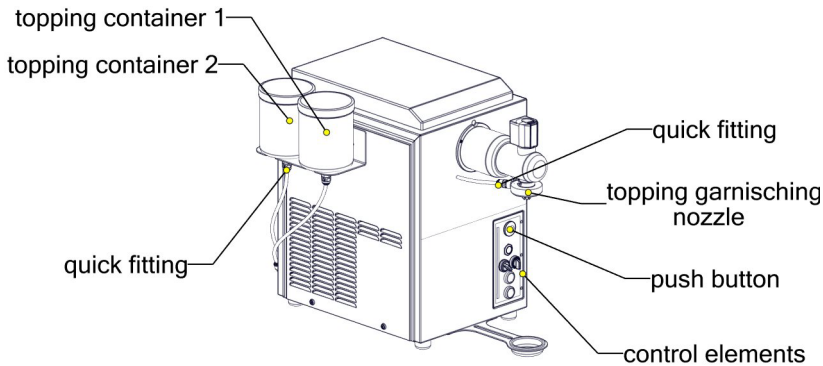


fig. 1

Control elements




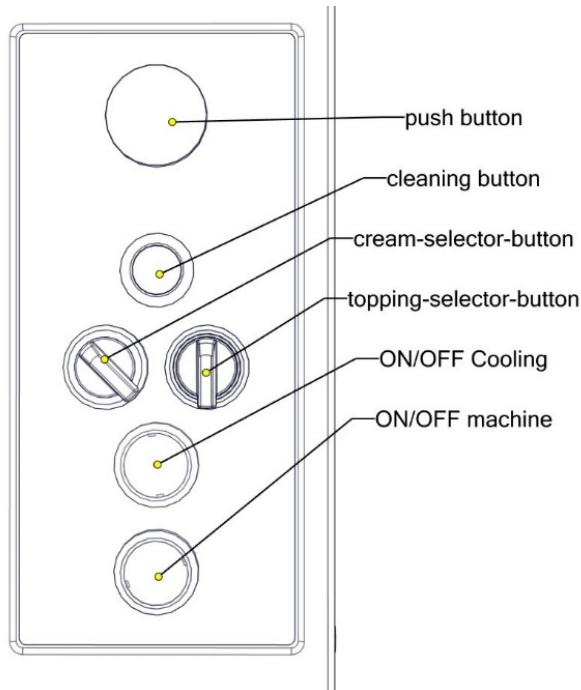


fig. 2

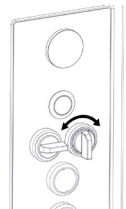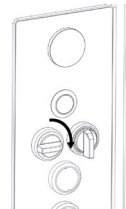

2. Initial Operation


- Before using the Whipping Cream Machine for the first time prepare everything like it is mentioned in the original operating instruction (*on page 11 in the original operation instruction*).
- Agitate the syrup in the original packing as good as possible and fill it into the topping-container 1 or rather 2 of the Euro-Cream-Wave and lock it by turning the cover on the container.
- Hang a 5-litre pail under the outlet
- Turn the cream-selector-button (left selector button) around 90° to the right. The pump is out now and the transportation of whipped cream is no longer possible.
- Depending on the desired topping turn the selector button for the topping (right selector button) to the left or to the right. Right position is the 1 container. Left position is the 2 container (*page 3, fig. 1*).

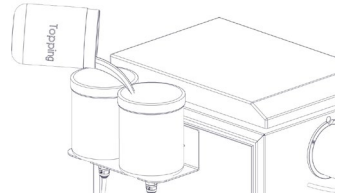




- Press the press button constantly till the selected topping flows out of the garnishing-nozzle-adapter.

**⚠ Process could take up to
½ minutes**

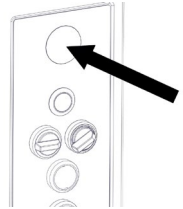

Do this step for both topping-containers to make same ready for operation.


- Turn the cream-selector-button for whipped cream (left selector button) around 90° to the left.
The transportation of whipped cream is on now.

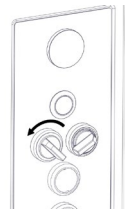




3. Topping selection during the use:

- Depending on the desired topping turn the topping-selector-button (right selector button) to the left (2 container) or to the right (1 container) (*page 3, fig. 1*)

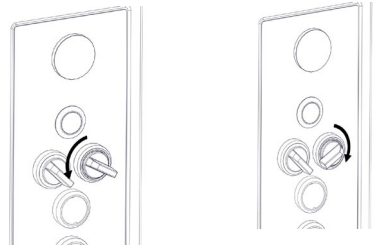


- If you press the press-button the whipped cream and the selected topping comes out together.

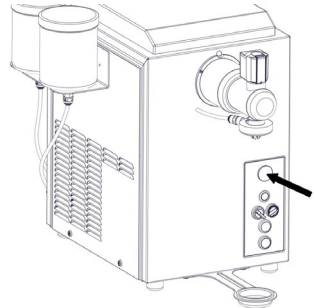

4. Whipped cream without topping

- Turn the topping-selector-button to the „middle“ and press the press-button to get whipped cream **without** a topping. (*page 3, fig. 1*)

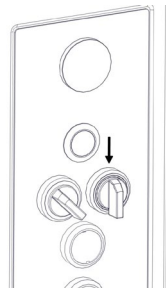





5. Disinfection cleaning (daily)

- Turn the topping-selector-button into the middle position (The transportation of topping is out)
- Swing up suction pipe and clean its outside with a paper towel.
- Fill cleaning bucket with 1,5 l warm drinking water (max. 50°C) and put it into SANOMAT.
- Tip cleaning switch shortly. The cleaning program will run automatically (duration 3 minutes). Remove possible remaining liquid with the press-button.

- When the pre cleaning program finishes press the release knob of both express couplings at the topping-garnishing-nozzle and disconnect it.

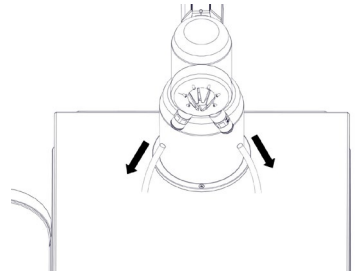


- Disconnect the garnishing nozzle and topping-garnishing-nozzle together by turn it in a rotary motion to the right and pull it down.

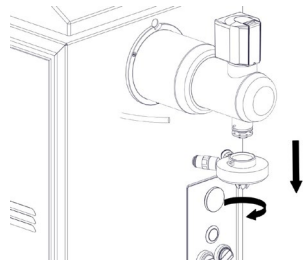



- Press the garnishing nozzle out of the topping-garnishing-nozzle.
- Wash the garnishing nozzle and topping-garnishing-nozzle under hot running drinking water, to remove the remaining cream and topping.
- Do the main disinfection cleaning, like it is mentioned in the original operating instruction (*on page 13-14*).

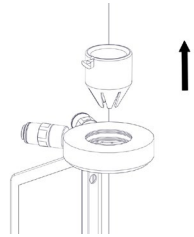


⚠ Topping-selector-button has to be at the middle position

- Press the garnishing nozzle back into the topping-garnishing-nozzle.

⚠ Attention! The bore of the topping-garnishing-nozzle and the spike of the garnishing nozzle have to concur.

⚠ Check the correct position of the 3 gaskets in the inside of the topping-garnishing-nozzle.

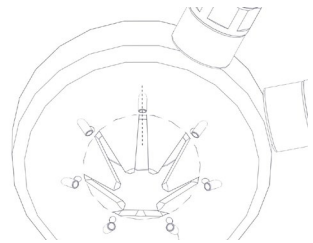

- Slip the garnishing nozzle and topping-garnishing-nozzle on the outlet of the machine.




⚠ Check the correlation of the bore of the topping-garnishing-nozzle and the spike of the garnishing nozzle once again.

- Do the final disinfection cleaning, like it is mentioned in the original operating instruction (*on page 13-14*).



6. Cleaning if you change the topping in a container:

- Release knob of the express couplings at the topping-container, which is wished to be changed and disconnect it from the tube(s).
- Remove the remaining topping(s).
- Wash the topping-container(s) under hot running drinking water.
- Connect the tube(s) and the topping-container(s) by using the express coupling.
- Fill 1L warm water with Sano-Premium-Clean (30ml) pro container.
- Turn the cream-selector-button 90° to the right. (pump is off)
- Depending on the desired topping, which should be changed, turn the topping-selector-button (right selector button) to the left or to the right. Right position is the 1 container. Left position is the 2 container (*page 3, fig. 1*).

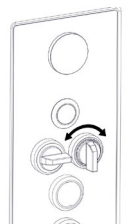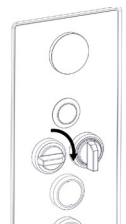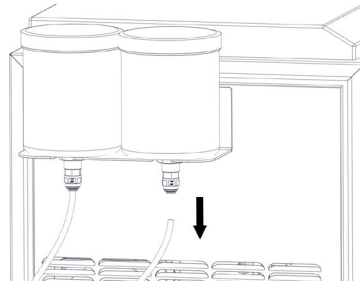

⚠ Please hold the bucket as near as possible below the outlet to prevent splash


- Press the press button in an interval till the container(s) are empty.



- Fill 1L water in the container(s) and press the press button in an interval again till the container(s) are empty.
- Do the daily disinfection cleaning as mentioned at point 5..
- Now the machine can be used with the new topping, like mentioned at point 5.

7. Weekly Cleaning

- Please follow steps like it is mentioned at point 6.
- Do the daily disinfection cleaning, like it is mentioned in the original operating instruction (*on page 13-14*)

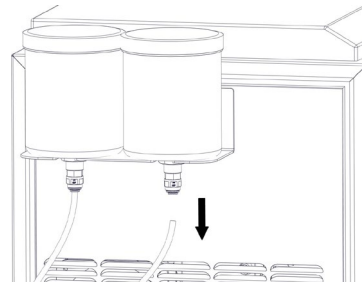

⚠ Topping-selector-button has to be at the middle position.

- Now the machine can be used, like it is mentioned at point 2.